

T1 installation Manual


1. Landing gear

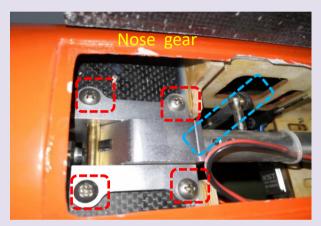


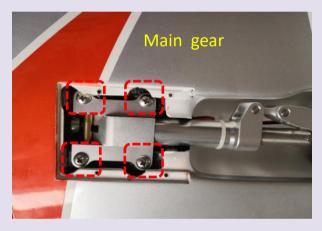




2. Aileron

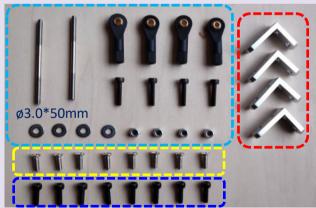


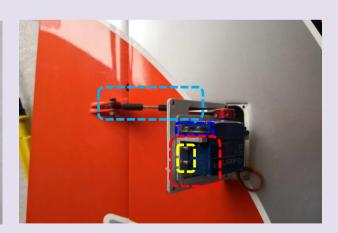


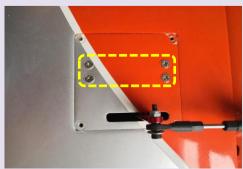

3. Flap



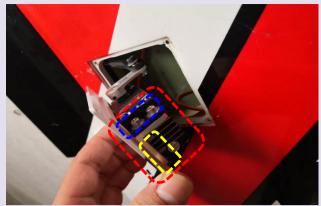

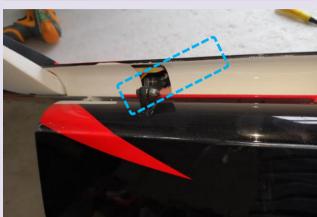



4. Vertical tail







5. Horizontal tail







5. Auxiliary screws and tools



Fuselage connect screw

- 1. Servo cover fixing screw
- 2. Main gear cover fixing screw
- 3. Vertical and Harizontal servo fixing screw

6.CG & surface parameters

Item	Data
Aileron	± 25mm
Flap	50mm, 95mm
Elevator	± 20mm
Rudder	± 30mm
CG	235 mm \sim 245 mm