



F16 Installation manual


List of parts

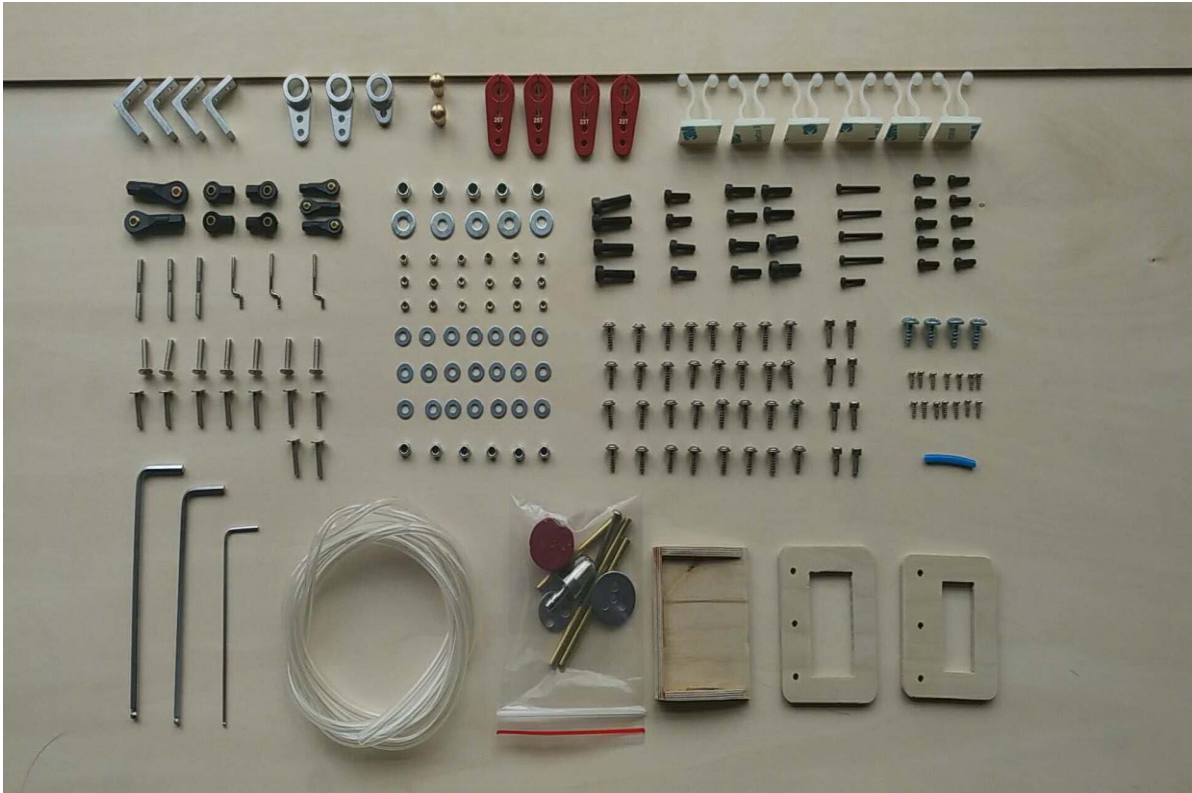



1、Aileron servo installation

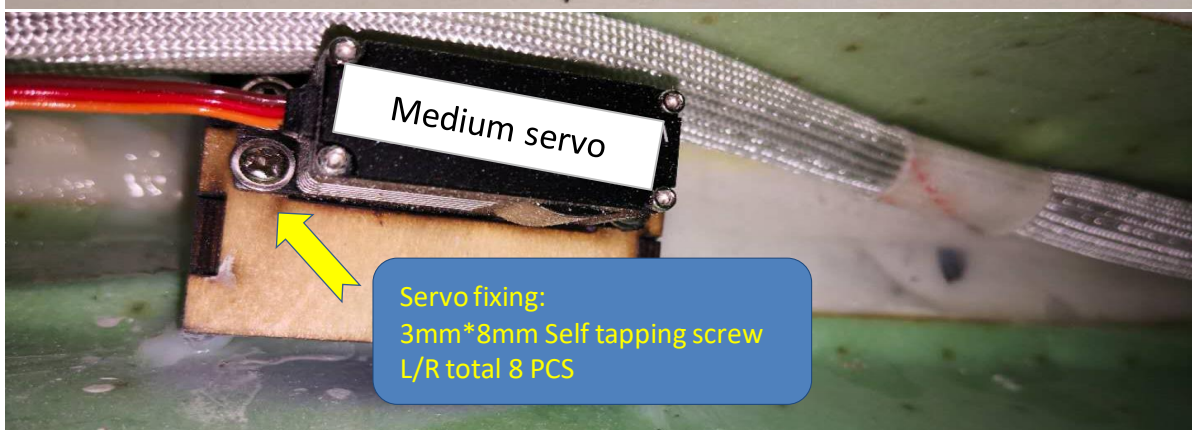

Servo fixing:
3mm*8mm Self tapping screw
L/R total 8 PCS

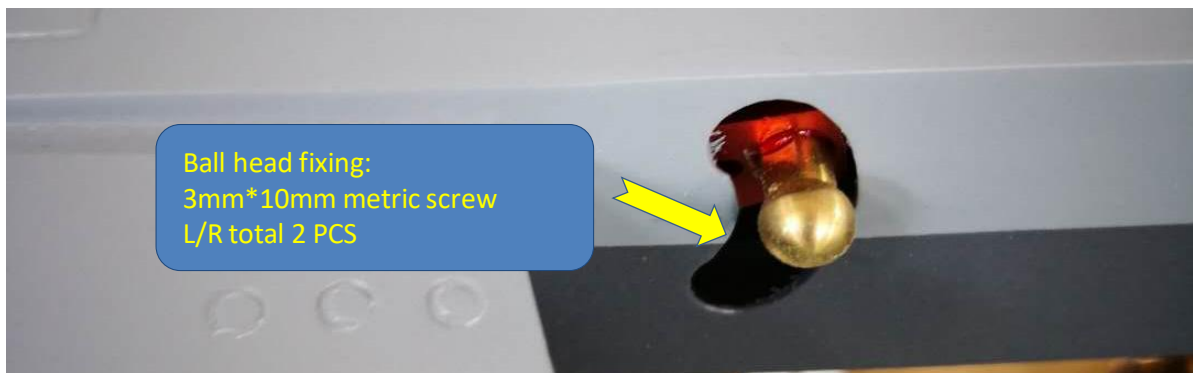


2、Horizontal tail installation

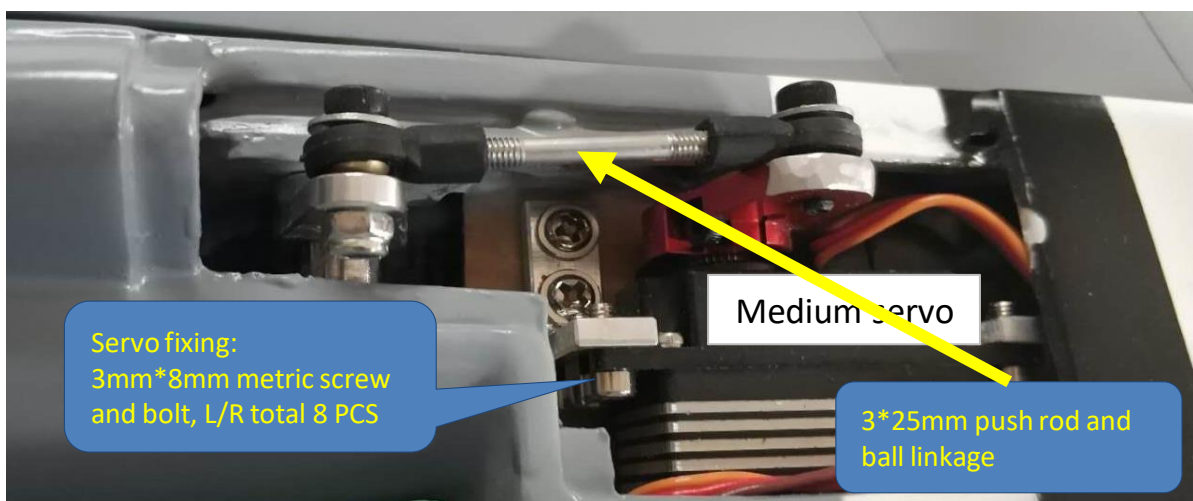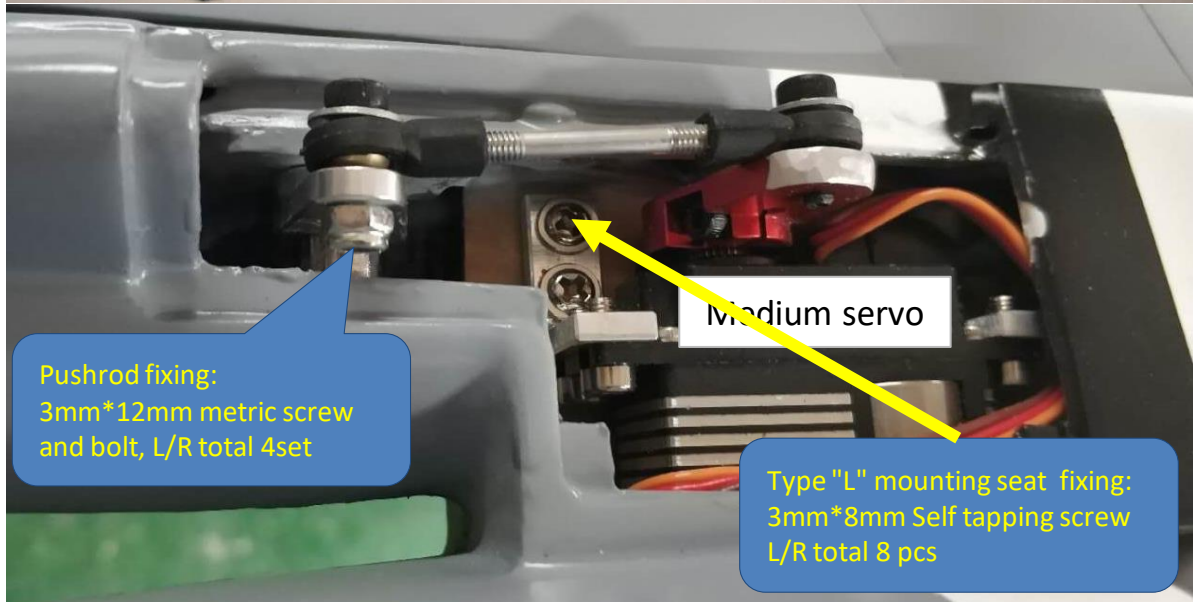


3、 Vertical tail installation




4、landing gear and door parts

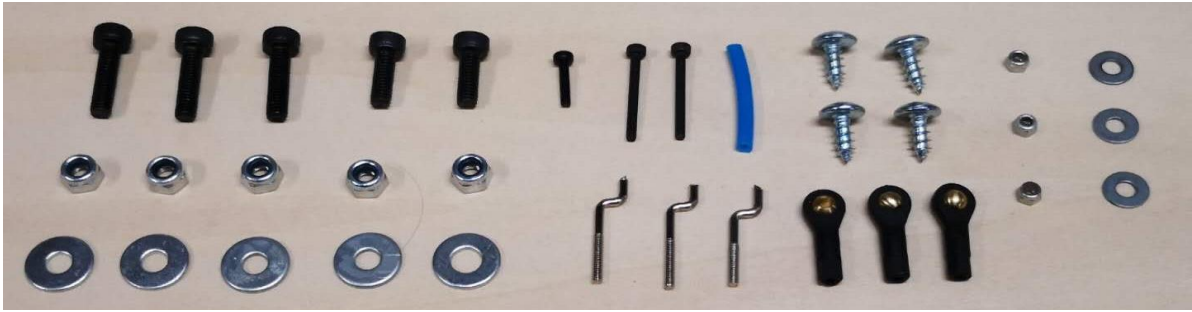


5、Nose gear and servo installation

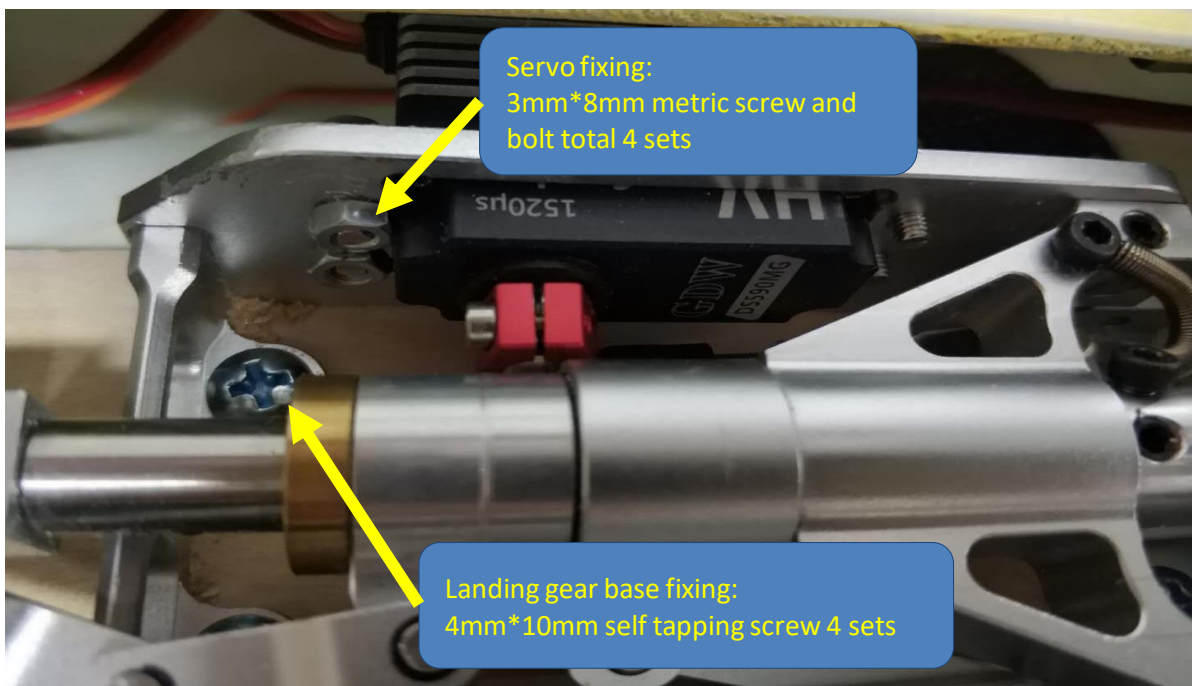

6、Main gear installation

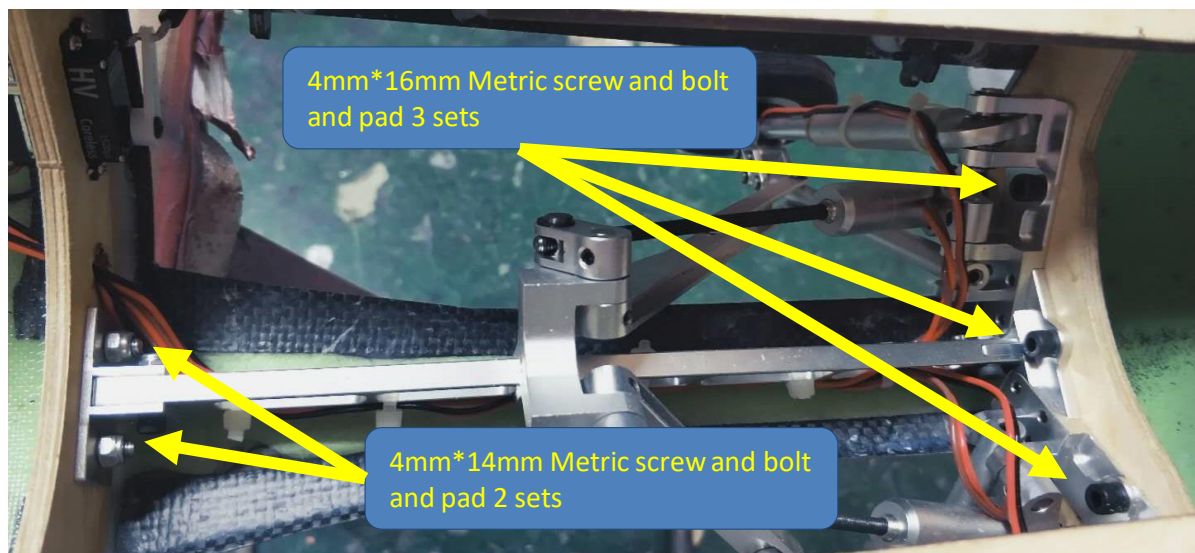

7、Gear door servos installation

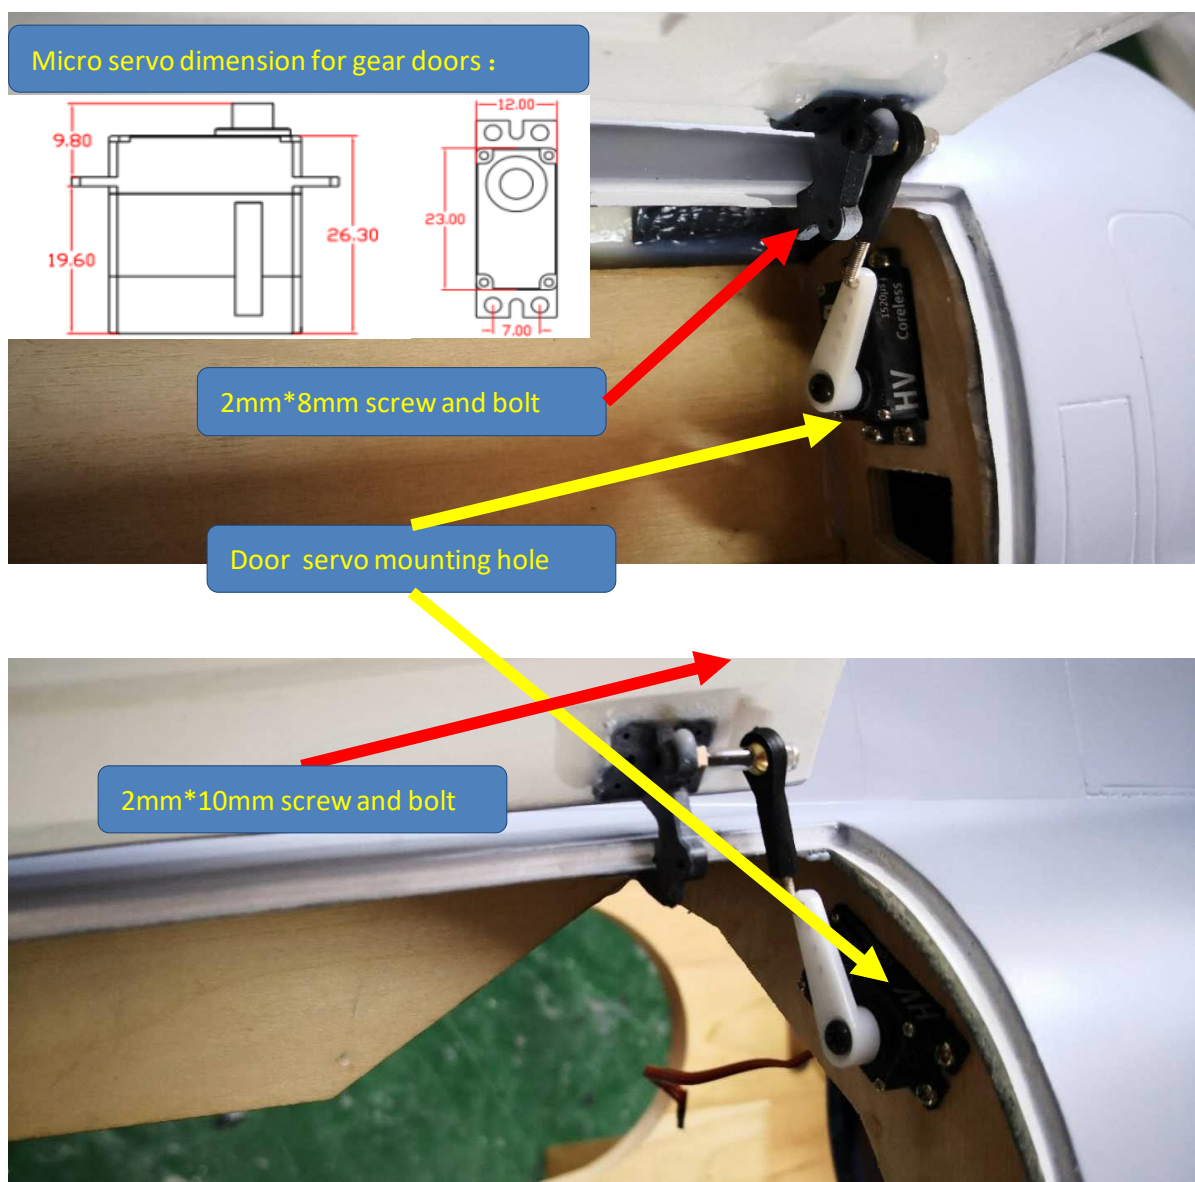

8、CG position

